

Yealink Profile Rules and Recovery Process

Yealink Profile Rules

Step 1


You will need to find the IP address of your Yealink handset; to do so pair the handset to the base and press the middle button 4 times. The correct IP should then be displayed.

Step 2

In your web browser search for the IP address of your Yealink handset which will take you to the Yealink log-in page.

Username: **admin**

Password: **admin**

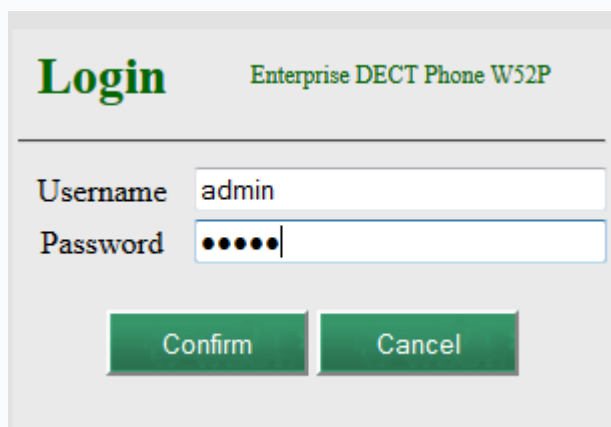


The image shows a login interface for a Yealink Enterprise DECT Phone W52P. The title is "Login" in green, with "Enterprise DECT Phone W52P" in smaller green text to its right. Below the title is a horizontal line. There are two input fields: "Username" with the text "admin" and "Password" with six black dots. At the bottom, there are two green buttons: "Confirm" and "Cancel".

Step 3

Once you're logged in click on the "phone" tab at the top of the page.

When the Phone page loads up, select “Auto Provision” from the left-hand menu.

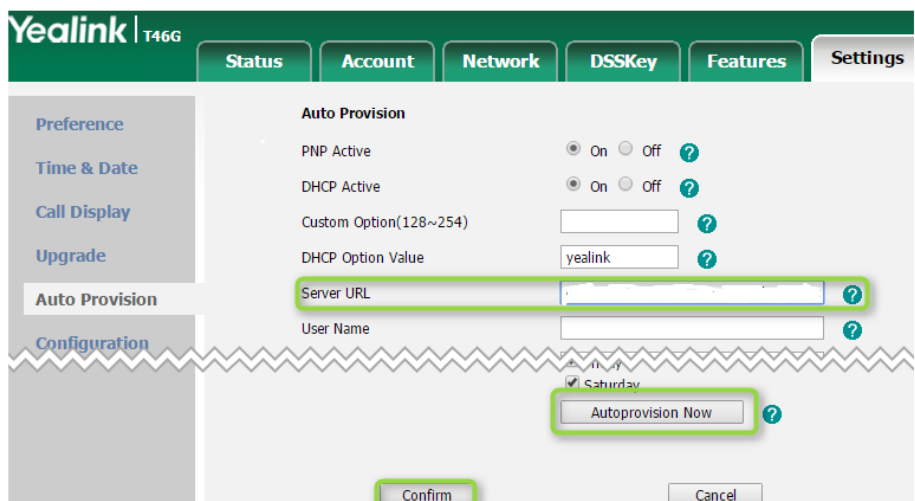

Step 4

In the provisioning server text box enter the following profile rule and click “Confirm”.

Device	Profile Rule
W52P	http://xsp.unlimitedhorizon.co.uk/dms/Yealink_W52P
W73P	http://xsp.unlimitedhorizon.co.uk/dms/Yealink_W73P
T46U	http://xsp.unlimitedhorizon.co.uk/dms/Yealink_T46U
AX83H	http://provisioning-gb-aws.gammadm.net/horizon/yealink/ax83h/start
T73W	http://provisioning-gb-aws.gammadm.net/horizon/yealink/t73w/start
T74W	http://provisioning-gb-aws.gammadm.net/horizon/yealink/t74w/start
T87W	http://provisioning-gb-aws.gammadm.net/horizon/yealink/t87w/start

Following this process the phone will restart a number of times to complete the firmware upgrade,

profile download and the initial registration. This takes around 15-20 minutes.