


Zyxel DX3301 - ADSL NAT-ed Setup

Add a New WAN Interface

- Click the three lines menu in the top-right corner of the screen.

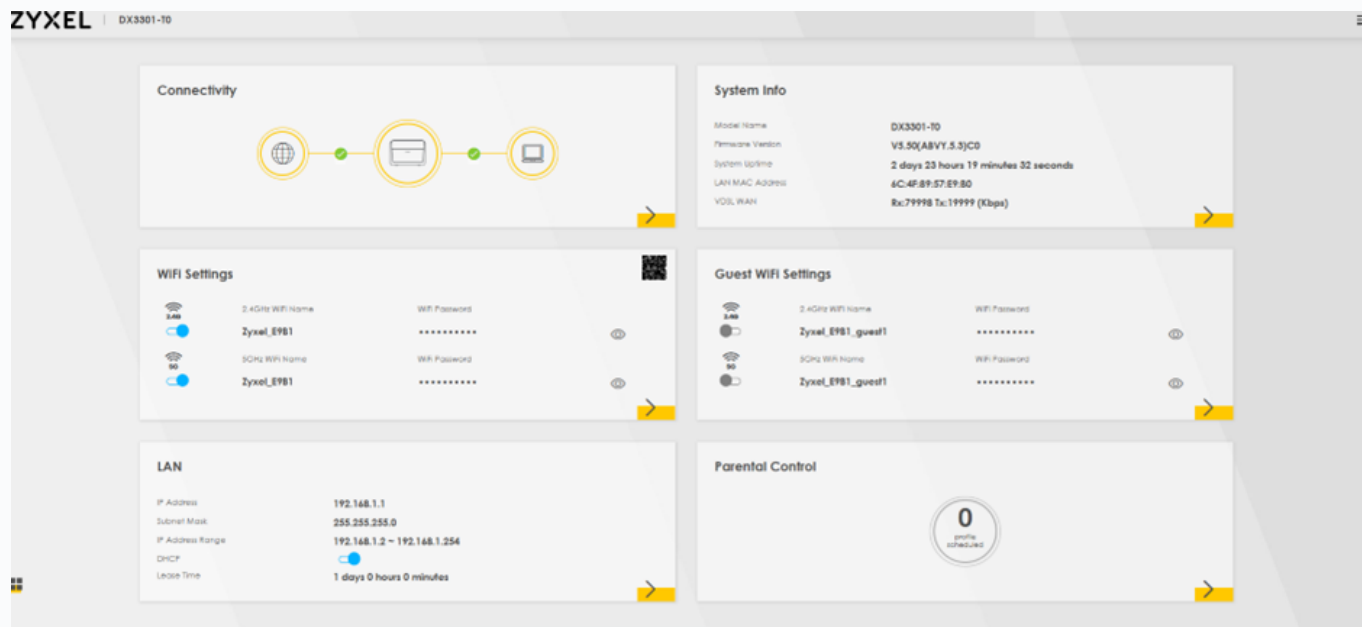

- Navigate to **Network Setting**, then **Broadband**.
- Click **Add New WAN Interface**.
- An example setup with NAT is shown below:

Edit WAN Interface

General

Name: Office

Type: ADSL over ATM

Mode: Routing

Encapsulation: PPPoA

IPv4/IPv6 Mode: IPv4 Only

PPP Information

PPP User Name: [redacted]@b2bdsi

PPP Password: [redacted]

PPP Connection Trigger: Auto Connect On Demand

PPPoE Passthrough:

ATM PVC Configuration

VPI [0-255]: 0

VCI [32-65535]: 38

Encapsulation: VC/MUX

Service Category: UBR Without PCR

IP Address

Obtain an IP Address Automatically

Static IP Address

DNS Server

Obtain DNS Info Automatically

Use Following Static DNS Address

Routing Feature

NAT: IGMP Proxy:

Apply as Default Gateway: Fullcone NAT:

6RD:

Cancel **Apply**

- Click **Apply** to save this interface.