



Zyxel DX3301 - SoGEA NAT-ed Setup

Add new WAN interface

- Click the three bars menu in the top right.

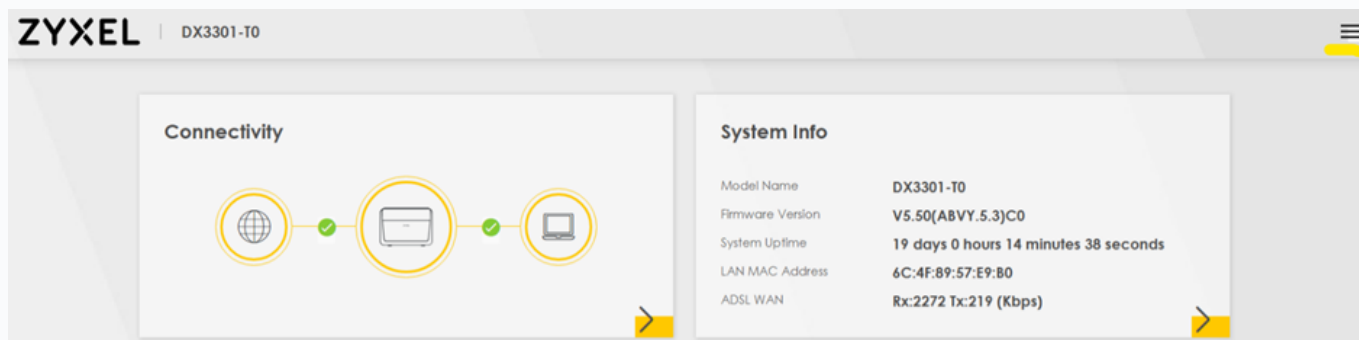

- Choose **Network Setting**, then **Broadband**.
- Select **Add New WAN Interface**.

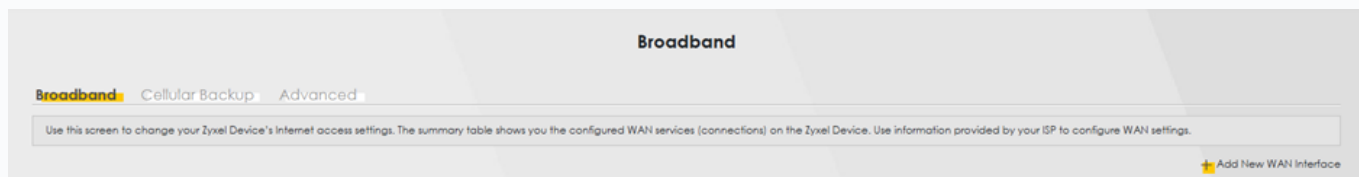

- A fibre NAT-ed setup configuration is below, though your specific PPP information/circuit credentials should be used:

<
Add New WAN Interface

General

Name:

Type:

Mode:

Encapsulation:

IPv4/IPv6 Mode:

PPP Information

PPP User Name:

PPP Password:

PPP Connection Trigger: Auto Connect On Demand

PPPoE Passthrough:

VLAN

802.1p:

802.1q: (0~4094)

MTU

MTU:

IP Address

Obtain an IP Address Automatically

Static IP Address

Routing Feature

NAT: IGMP Proxy:

Apply as Default Gateway: Fullcone NAT:

6RD:

DNS Server

Obtain DNS Info Automatically

Use Following Static DNS Address


Cancel
Apply

- Click **Apply**.


- Your new WAN information will now be available in the **Broadband** section of **Network Setting**.

Editing a WAN interface

- Click the three bars menu in the top right.

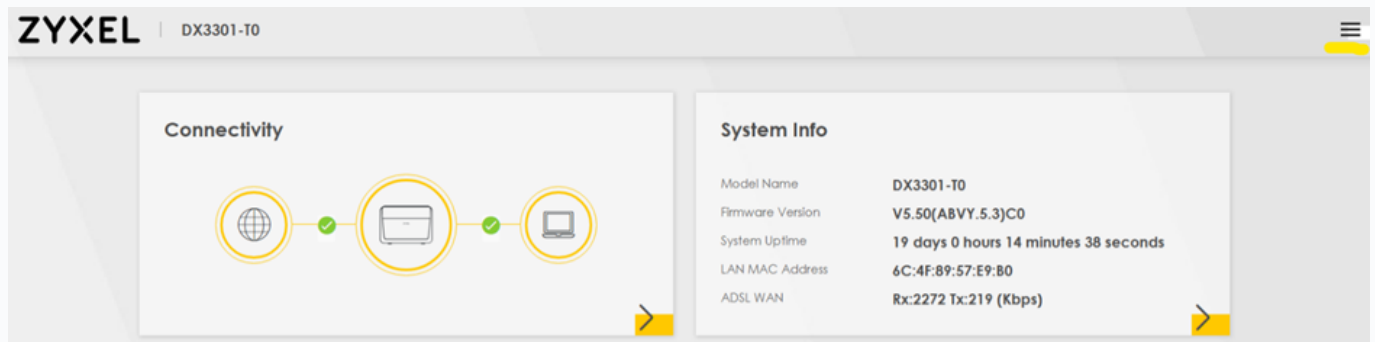

- Choose **Network Setting**, then **Broadband**.
- Select **Modify** on the WAN interface you wish to edit.

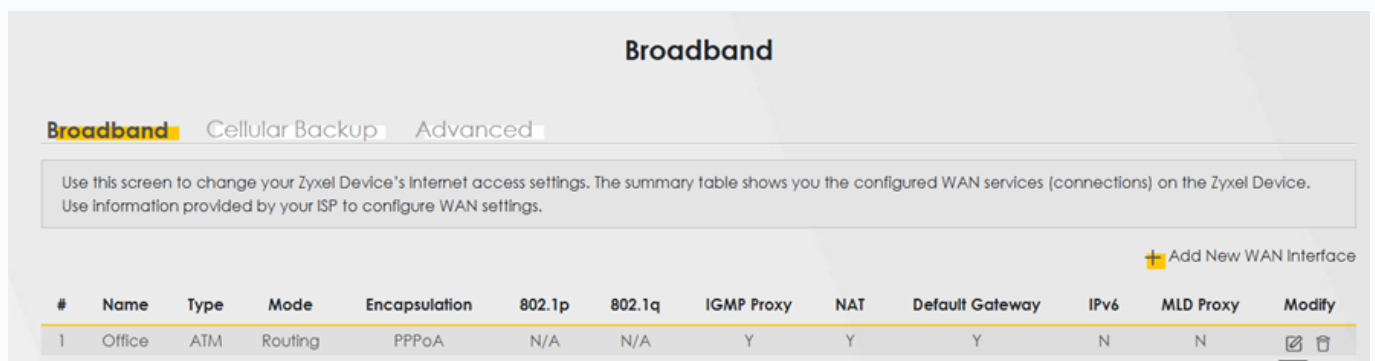

- You can edit as required, though standard setup will match the following – though your specific PPP information/circuit credentials should be used.
- Click **Apply** to save these changes.